

SNOW

SnowPAR™ Pro AW 18 DMX-chart

DMX 1 Channel mode

CH1	Dimmer	0~255
-----	--------	-------

Select color temperature in the menu, 1800k,2700k,3200,5600k,6500k

DMX 3 Channel mode

CH1	Amber	0~255
CH2	WW	0~255
CH3	CW	0~255

DMX 5 Channel mode

CH1	Dimmer	0~255
CH2	Amber	0~255
CH3	WW	0~255
CH4	CW	0~255
CH5	Strobe	0~255

DMX 7 Channel mode

CH1	Dimmer	0~255	
CH2	Amber	0~255	Ch. 5: 0 = Ch. 2 Amber dimming
CH3	WW	0~255	Ch. 5: 0 = Ch. 3 WW dimming
CH4	CW	0~255	Ch. 5: 0 = Ch. 4 CW dimming
CH5	Program	0~A/WW/CW Dimming	
	Pr.01	1~24	*Ch.6 = Color select --> 0~33(Blackout)
	Pr.02	25~49	*Ch.6 = Speed 0~255 34~67(Amber)
	Pr.03	50~74	*Ch.6 = Speed 0~255 68~101(Amber-WW)
	Pr.04	75~99	*Ch.6 = Speed 0~255 102~135(WW)
	Pr.05	100~124	*Ch.6 = Speed 0~255 136~169(Amber-CW)
	Pr.06	125~149	*Ch.6 = Speed 0~255 170~203(WW-CW)
	Pr.07	150~174	*Ch.6 = Speed 0~255 204~237(CW)
	Pr.08	175~199	*Ch.6 = Speed 0~255 238~255(ALL)
	Pr.09	200~224	*Ch.6 = Speed 0~255
	Sound	225~255	*Ch.6 = Sensitivity 0~255
CH6	Ch.5 Speed/Color/Control	0~255*	
CH7	Strobe	0~255	