

SNOW

DMX-chart for SnowPAR™ Zoom Quad 12

5CH	Function	Value	
1	Red	000-255	0~100%
2	Green	000-255	0~100%
3	Blue	000-255	0~100%
4	White	000-255	0~100%
5	Zoom	000-255	0~100%

7CH	Function	Value	
1	Dimmer	000-255	0~100%
2	Red	000-255	0~100%
3	Green	000-255	0~100%
4	Blue	000-255	0~100%
5	White	000-255	0~100%
6	Strobe	000-010	NO Function
		011-255	Strobe Slow to Fast
7	Zoom	000-255	0-100%

10CH	Function	Value	
1	Dimmer	000-255	0~100%
2	Red	000-255	0~100%
3	Green	000-255	0~100%
4	Blue	000-255	0~100%
5	White	000-255	0~100%
6	Strobe/Speed	000-010	NO Function
		011-255	Strobe Slow to Fast
		000-255	Auto Speed Slow to Fast
7	Color Macros	000-015	No Function
		016-255	Color Macros
8	Mode	000-010	RGB mode
		011-050	Pulse effect 0-100%
		051-090	Pulse effect 100%-0
		091-130	Pulse effect 100%-0-100%
		131-170	Auto fade transition
		171-210	Auto snap transition (4 colors)
		211-255	Auto snap transition (15 colors)
9	Dimmer Speed	000-051	Preset dimmer speed from display menu
		052-101	Dimmer speed mode off
		102-152	Dimmer speed mode1 (fast speed)
		153-203	Dimmer speed mode2 (middle speed)
		204-255	Dimmer speed mode3 (slow speed)
10	Zoom	000-255	0-100%